

## BEAMERZ Installation Instructions

**WARNING:** BEAMERZ is designed for use on wheels only! Do not use as a warning or safety device.

BEAMERZ are attached by means of a high strength adhesive on the surface of foam rings. The foam rings allow attachment to curved and irregular surfaces. An extra set of rings is included to allow attachment to wheels with surface irregularities.

Apply BEAMERZ when temperature is between 50°F and 90°F.

Attaching BEAMERZ to painted wheels is not recommended. Adhesive may mar or damage paint.

1. Remove cap of BEAMERZ with a Phillips screwdriver. Install a 9-volt battery.
2. Clean and dry wheels. Remove wax or polish.
3. Wipe wheel center with isopropyl alcohol pads provided in BEAMERZ package.
4. Locate center point of wheel. BEAMERZ must be attached at the center of wheel center. If necessary and before removing adhesive liner, outline BEAMERZ with a pencil and check for center point. If wheel has removable center cap, it should be secured with a removable adhesive before attaching BEAMERZ (clear silicone RTV adhesive is recommended).
5. Once wheel center is located, make sure that foam conforms to all irregular contours of wheel surface. If not, use one additional foam ring. Peel off adhesive backing. Align BEAMERZ with wheel center before allowing contact with surface of wheel. When BEAMERZ is aligned on center point, lightly press BEAMERZ against wheel. Hold BEAMERZ against wheel for 30 seconds.
6. Allow adhesive to cure for 1 hour before driving.
7. BEAMERZ adhesive is **permanent!** To remove BEAMERZ, carefully separate housing from foam ring. Peel off remaining foam ring and clean surface with glass cleaner or isopropyl alcohol. Foam ring will be destroyed in removal and new BEAMERZ must be purchased to reattach. Please go to [www.beamerz.net](http://www.beamerz.net) for information on removing BEAMERZ and cleaning residual foam or adhesive.